

How to add a remote control to the parking lock?

After the users purchase parking locks, if the previous remote control of parking lock is lost (including data loss) or damaged, or want to increase remote controls, the user can operate as following:

1. Open the black cover of parking lock with key.
2. Plug in the power battery of parking lock again (if the original battery has been connected all the time, Pull the battery out and wait for 4 seconds, then replug it in).
3. After the power is turned on, the parking lock indicator flashes (usually about four seconds), and press the lock and unlock button on remote control at the same time within four seconds.
The indicator light will be on and stop flashing, indicating that the pairing is successful.
If time is out, you can repeat step 1.
4. If the pairing is not successful, you can repeat the above steps.

Note: Only one piece remote control can be added each time when the power battery is reconnected, and multiple remote controls need to be repeated many times.

One set of parking lock can increase to maximum 8 pieces of remote controls.

